


# WIRING DIAGRAM

## ELECTRICAL CIRCUITS INFORMATION

NO.	WIRE GAGE	COLOR	CIRCUIT TITLE	NO.	WIRE GAGE	COLOR	CIRCUIT TITLE
1E	18	Blk.	Starter Solenoid "Bat" to Horn Relay "Bat".	41	18	Blk.	Direct Sw. to Direct. Flasher "L" Terminal.
1H	18	Blk. w/Grn. Tr.	Head Light Sw. Cir. Breaker to Head Light Sw.	42	18	Blk. w/Wht. Tr.	Back-Up Light Sw. to Left Back-Up Lamp.
2	12	Red	Starter Solenoid Sw. to Ammeter (-) Discharge Side.	43A	18	Blk. w/Wht. Tr.	Left Back-Up Lamp to Right Back-Up Lamp.
3	16	Red w/Blk. Tr.	Head Light Sw. "H" Term. to Foot Dimmer Sw. "Bat".	45	18	Wht. w/Blk. Tr.	Back-Up Fuse to Back-Up Sw.
4	18	Grn.	Headlight Sw. "F" Term. to Parking Light Cir.	47B	16	Wht.	Cigar Lighter Ground.
4A	16	Grn.	Parking Light Cir. to Right Parking Lamp.	47D	16	Wht.	Gas Gage Case Ground.
4B	16	Grn.	Parking Light Cir. to Left Parking Lamp.	47E	16	Wht.	Heat Gage Case Ground.
5	18	Blk. w/Yel. Tr.	Headlight Sw. "T" Term. to Tail Lamp Cir.	47F	18	Wht.	Accessory & Instruments Ground.
5A	18	Blk. w/Yel. Tr.	Left Tail Lamp to Tail Light Cir. Splice.	47G	18	Wht.	Body Ground Circuit.
5B	18	Blk. w/Yel. Tr.	Tail Light Cir. Splice to Right Tail Lamp Conn.	47H	16	Wht.	Courtesy Lamp Case Ground.
5H	18	Blk. w/Yel. Tr.	Left Tail Lamp to License Lamp.	47I	16	Wht.	Body Ground Cir. to Right Dome Lamp.
5N	18	Blk. w/Yel. Tr.	Tail Light Cir. to Instru. Light Sw. "Bat" Term.	47J	16	Wht.	Body Ground Cir. to Left Dome Lamp.
5P	18	Blk. w/Yel. Tr.	Tail Light Cir. to Left Tail Lamp.	47K	18	Wht.	Right Tail Lamp Ground.
5Q	18	Blk. w/Yel. Tr.	Tail Light Cir. to Vent and Heater Control Light.	47L	18	Wht.	Left Tail Lamp Ground.
5R	18	Blk. w/Yel. Tr.	Tail Light Cir. to Second Vent and Heater Control Light.	47M	18	Wht.	Back-Up Lamp Ground to Body Ground.
5S	18	Blk. w/Yel. Tr.	Tail Light Cir. to Cigar Lighter Light.	47N	18	Wht.	Left Door Sw. to Body Ground Cir.
6	18	Red w/Blk. Tr.	Gas Gage to Gas Tank Unit.	47S	18	Wht.	Right Door Sw. to Body Ground Cir.
7	18	Red	Stop Light Sw. to Stop & Dome Lamp Fuse (or Cir. Breaker).	47V	18	Wht.	Vacuum Gage Light Ground to Body Ground Cir.
8	18	Blk.	Instru. Light Cir. to Splice.	47W	18	Wht.	Vent & Heat Control Panel Lamp to Body Ground Cir.
8A	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47X	18	White	Vent & Heat Control Panel Lamp to Body Ground Cir.
8B	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47Y	18	Wht.	Body Grd. to Shift Light.
8C	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47AA	18	Wht.	Tachometer Case to Body Ground Cir.
8D	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47DD	18	Wht.	Trunk Light Sw. to Body Ground Cir.
8E	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47EE	18	Wht.	Left Back-Up Lamp to Right Back-Up Lamp Control.
8F	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47FF	18	Wht.	Rear Seat Speaker to Body Grd.
8G	18	Blk.	Instru. Light Cir. Splice to Instru. Lamps.	47GG	18	Wht.	Tachometer Steel Term. to Body Grd. Cir.
8H	18	Blk.	Instru. Light Cir. to Instru. Lamps.	47HH	18	Wht.	Tachometer Sender Unit Grd. to Body Grd. Cir.
8Q	12	Wht. w/Blk. Tr.	Ign. Sw. Acc. Cir. to Acc. Fuse Block.	49	18	Wht.	Front Chassis Cable Grd. to Body Grd. Cir.
10A	18	Red	Headlight (Dr.) Cir. to Right Headlamp (Dr.)	49C	18	Wht.	Chassis Cable (Front Left) to Chassis Cable Ground.
10B	18	Wht.	Foot Dimmer Sw. to High Beam Indicator.	49D	18	Wht.	Chassis Cable Ground to Left Head Lamp Case.
10C	18	Red	Headlight Cir. to Left Headlamp (Dr.)	49E	18	Wht.	Chassis Cable Grd. to Left Parking Lamp Case.
11A	18	Blk.	Headlight Cir. (Pass.) to Right Headlamp (Passing).	49F	18	Wht.	Chassis Cable Ground to Left Horn Case.
11B	18	Blk.	Headlight Cir. (Passing) to Left Headlamp.	49G	18	Wht.	Chassis Cable (Front Right) to Chassis Cable Grd. Right.
12	18	Wht.	Horn Relay to Horn Push Button.	49H	12	Wht.	Chassis Cable Grd. to Alternator Frame.
13	18	Wht. w/Red Tr.	Starter Solenoid Sw. to Starter Safety Sw.	49J	18	White	Chassis Cable Grd. to Right Head Lamp Case.
14	18	Org.	Heat Indicator to Cyl. Head Unit.	49K	18	Wht.	Chassis Cable Grd. Front Right to Right Parking Lamp Case.
15	18	Red w/Wht. Tr.	Stop Light Sw. to Stop Lamp Cir. of Direct. Sw.	49L	18	Wht.	Chassis Cable Grd. Front Right to Right Horn Bracket.
16A	16	Yel.	Heater Sw. (High) to Heater Motor.	49M	18	Wht.	Chassis Cable Grd. to Chassis Cable Grd. Right.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	49N	18	White	Chassis Cable Grd. Right to Heater Motor Grd.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	49P	18	Wht.	Chassis Cable Grd. to Wiper Motor Grd.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	49	18	Blk. w/Wht. Tr.	Instru. Light Sw. to Instru. Light Resistance.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	50	18	Blk.	Ign. Light Resistor to Instru. Light Cir.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	51	18	Blk.	Wiper Armature-Field (Series) to Wiper Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	52	18	Blue	Wiper Park. Sw. to Wiper Sw. (Depressed Parking).
16B	16	Red	Heater Sw. (Low) to Heater Motor.	53	16	Yel.	Field (Shunt) "Grd." for Running in Wiper Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	54	16	Red	Field (Shunt) "Bat" for Running in Wiper Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	55	18	Gray & Blk.	Fuse to Auto. Trans. Light Cir.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	55A	18	Gray w/Blk. Tr.	Fuse to Auto. Trans. Light Cir. to Gas Gage Ign. Term.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	55B	18	Gray w/Blk. Tr.	Fuse to Auto. Trans. Light Cir. to Heat Indicator Gage Ign. Term.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	55C	18	Gray & Blk.	Auto. Trans. Light Cir. to Tachometer Sender (+) Terminal.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	56	16	Purple	Wiper Cir. Breaker to Wiper Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	57	16	Gray	Ign. Controlled Fuse Cir. to Heater Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	58	14	Blk.	Battery Fuse Cir. to Cigar Lighter
16B	16	Red	Heater Sw. (Low) to Heater Motor.	59	18	Trk.	Battery Fuse Cir. to Clock.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	60	18	Grn.	Radio to Radio Fuse.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	62	18	Blk.	Trunk Lamp to Trunk Sw. Conn.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	62A	18	Blk.	Trunk Light Sw. Conn. to Trunk Light Sw.
16B	16	Red	Heater Sw. (Low) to Heater Motor.	63	18	Wht.	Rear Seat Speaker to Rear Seat Speaker Sw. (18 Strand 200 Wtr.).
16B	16	Red	Heater Sw. (Low) to Heater Motor.	64	18	Yellow	Tachometer Sender "M" Terminal to Tachometer Brass Terminal.
25	12	Blk.	Ammeter (+) Side Cir. to Volt. Reg. "Bat" Terminal.				
25B	14	Blk.	Ammeter (+) Side Cir. to Ign. Sw. "Bat" Terminal.				
26C	12	Blk.	Ammeter (+) Side to Cir. Splice.				
26	18	Wht. w/Red Tr.	Starter Safety Sw. to Ign. Sw. Starter Terminal.				
27	18	Blk. w/Wht. Tr.	Horn Relay to Left Horn.				
27A	18	Blk. w/Wht. Tr.	Left Horn to Right Horn.				
28	18	Trk.	Direct. Sw. to Left Rear Direct. Lamp Conn.				
28	18	Grn.	Direct. Sw. to Right Rear Direct. Lamp Conn.				
28A	18	Blk.	Coil (-) Terminal to Tachometer Sender "D" Terminal.				
35	16	Blk.	Stop & Dome Lamp Fuse to Dome Lamp (or Stop Lamp) Cir.				
36A	18	Blk.	Dome Lamp Cir. Splice to Left Dome Lamp.				
36B	18	Blk.	Dome Lamp Cir. Splice to Right Dome Lamp.				
36C	18	Blk.	Dome Lamp Cir. Splice to Courtesy Lamp.				
36D	18	Blk.	Dome Lamp Cir. Splice to Trunk Lamp.				
37F	18	Red & Wht.	Courtesy Cir. to Right Front Door Sw.				
37G	18	Red & Wht.	Courtesy Lamp Control to Dome Lamp Control.				
37K	18	Red & Wht.	Courtesy Lamp Control to Dome Lamp Control Circuit.				


**COLOR CODE**  
 Blk.—Black  
 Wht.—White  
 Yel.—Yellow  
 Org.—Orange  
 Tr.—Tracer

Bm.—Brown  
 Grn.—Green

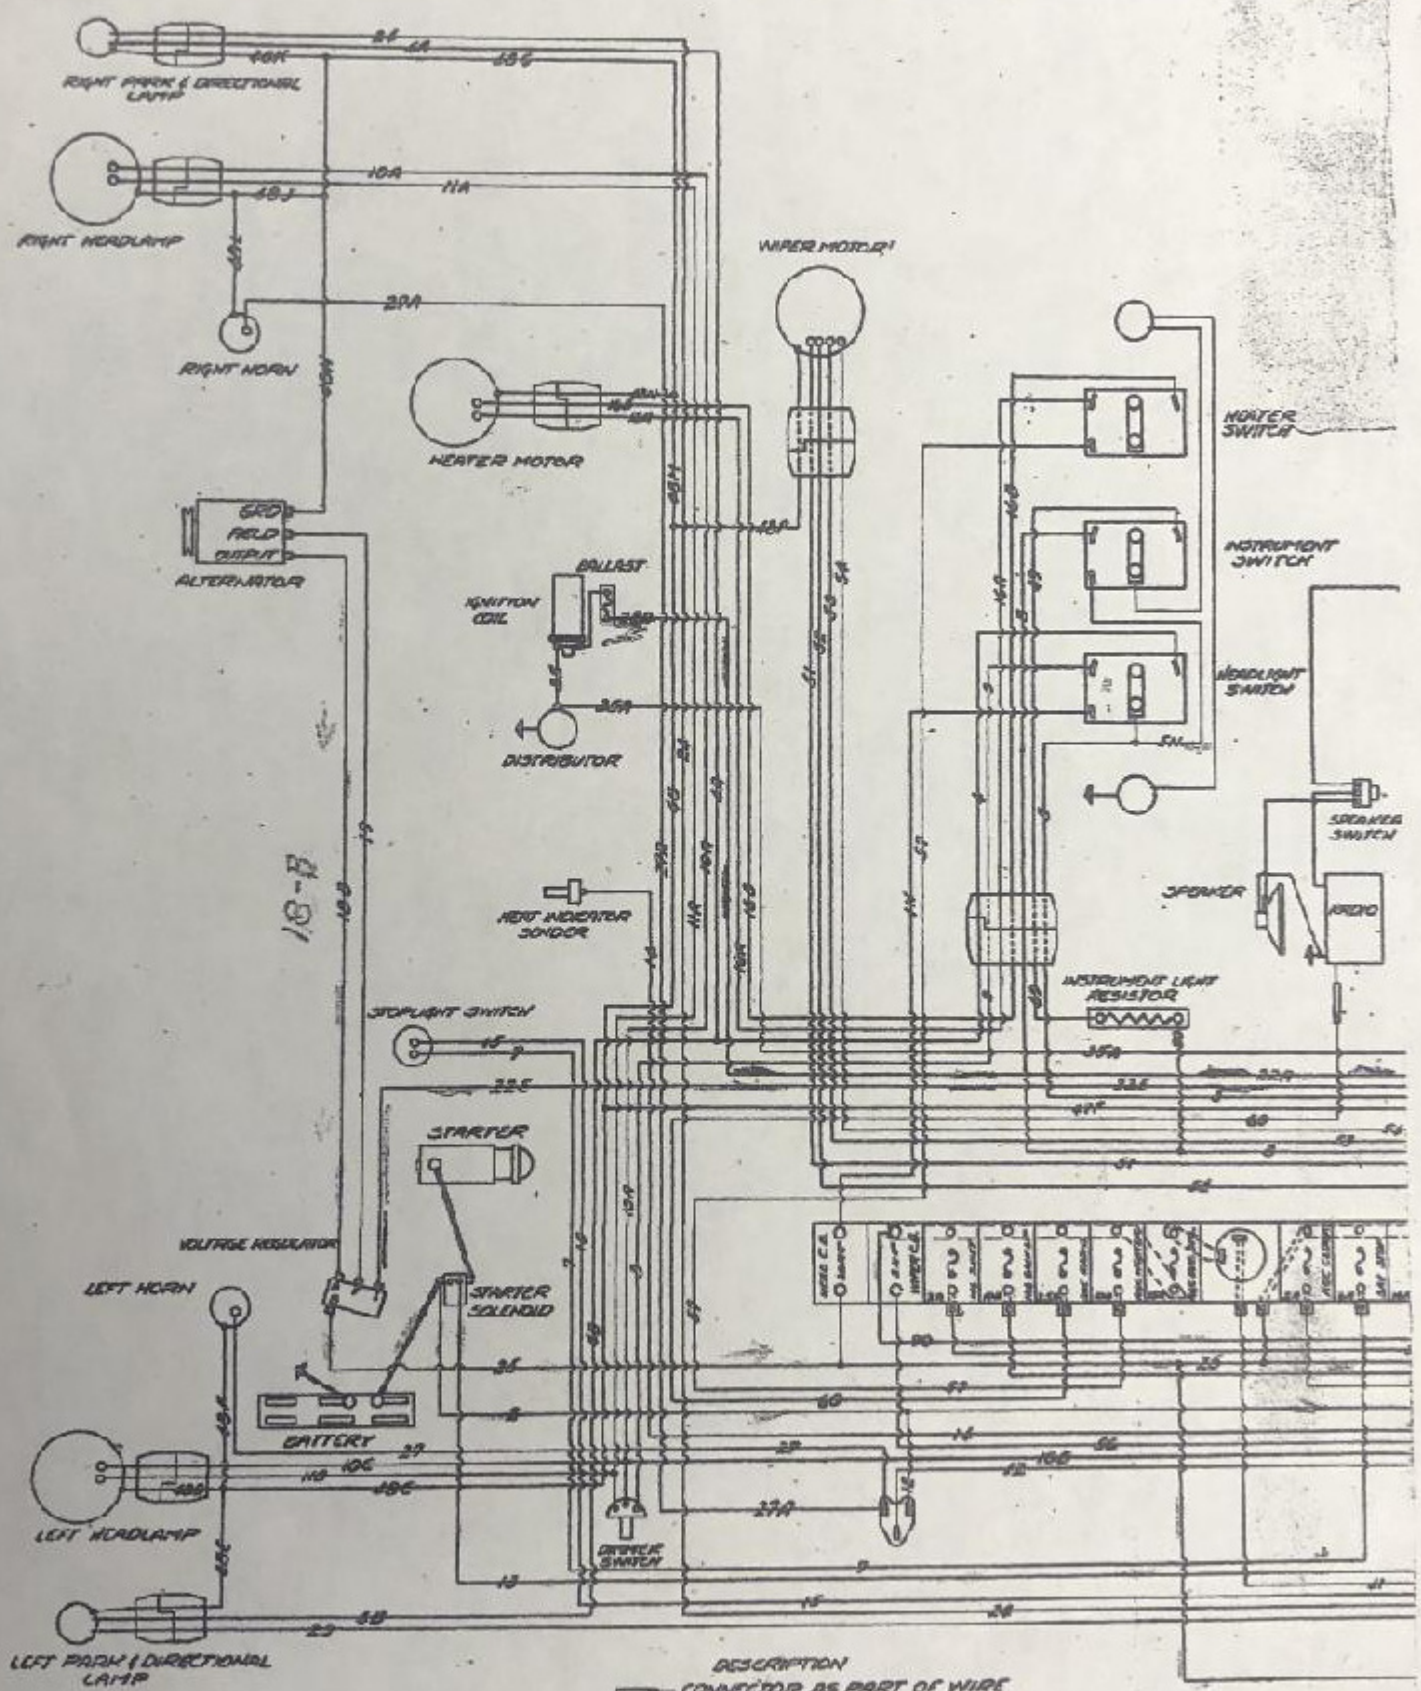

- DESCRIPTION
- CONNECTOR AS PART OF WIRE
  - ~ FUSE
  - GROUND CONNECTION
  - ~ RESISTANCE
  - ⊞ MULTIPLE CONNECTOR TO TOP BOTTOM

WIRE GAUGE OUTLINE

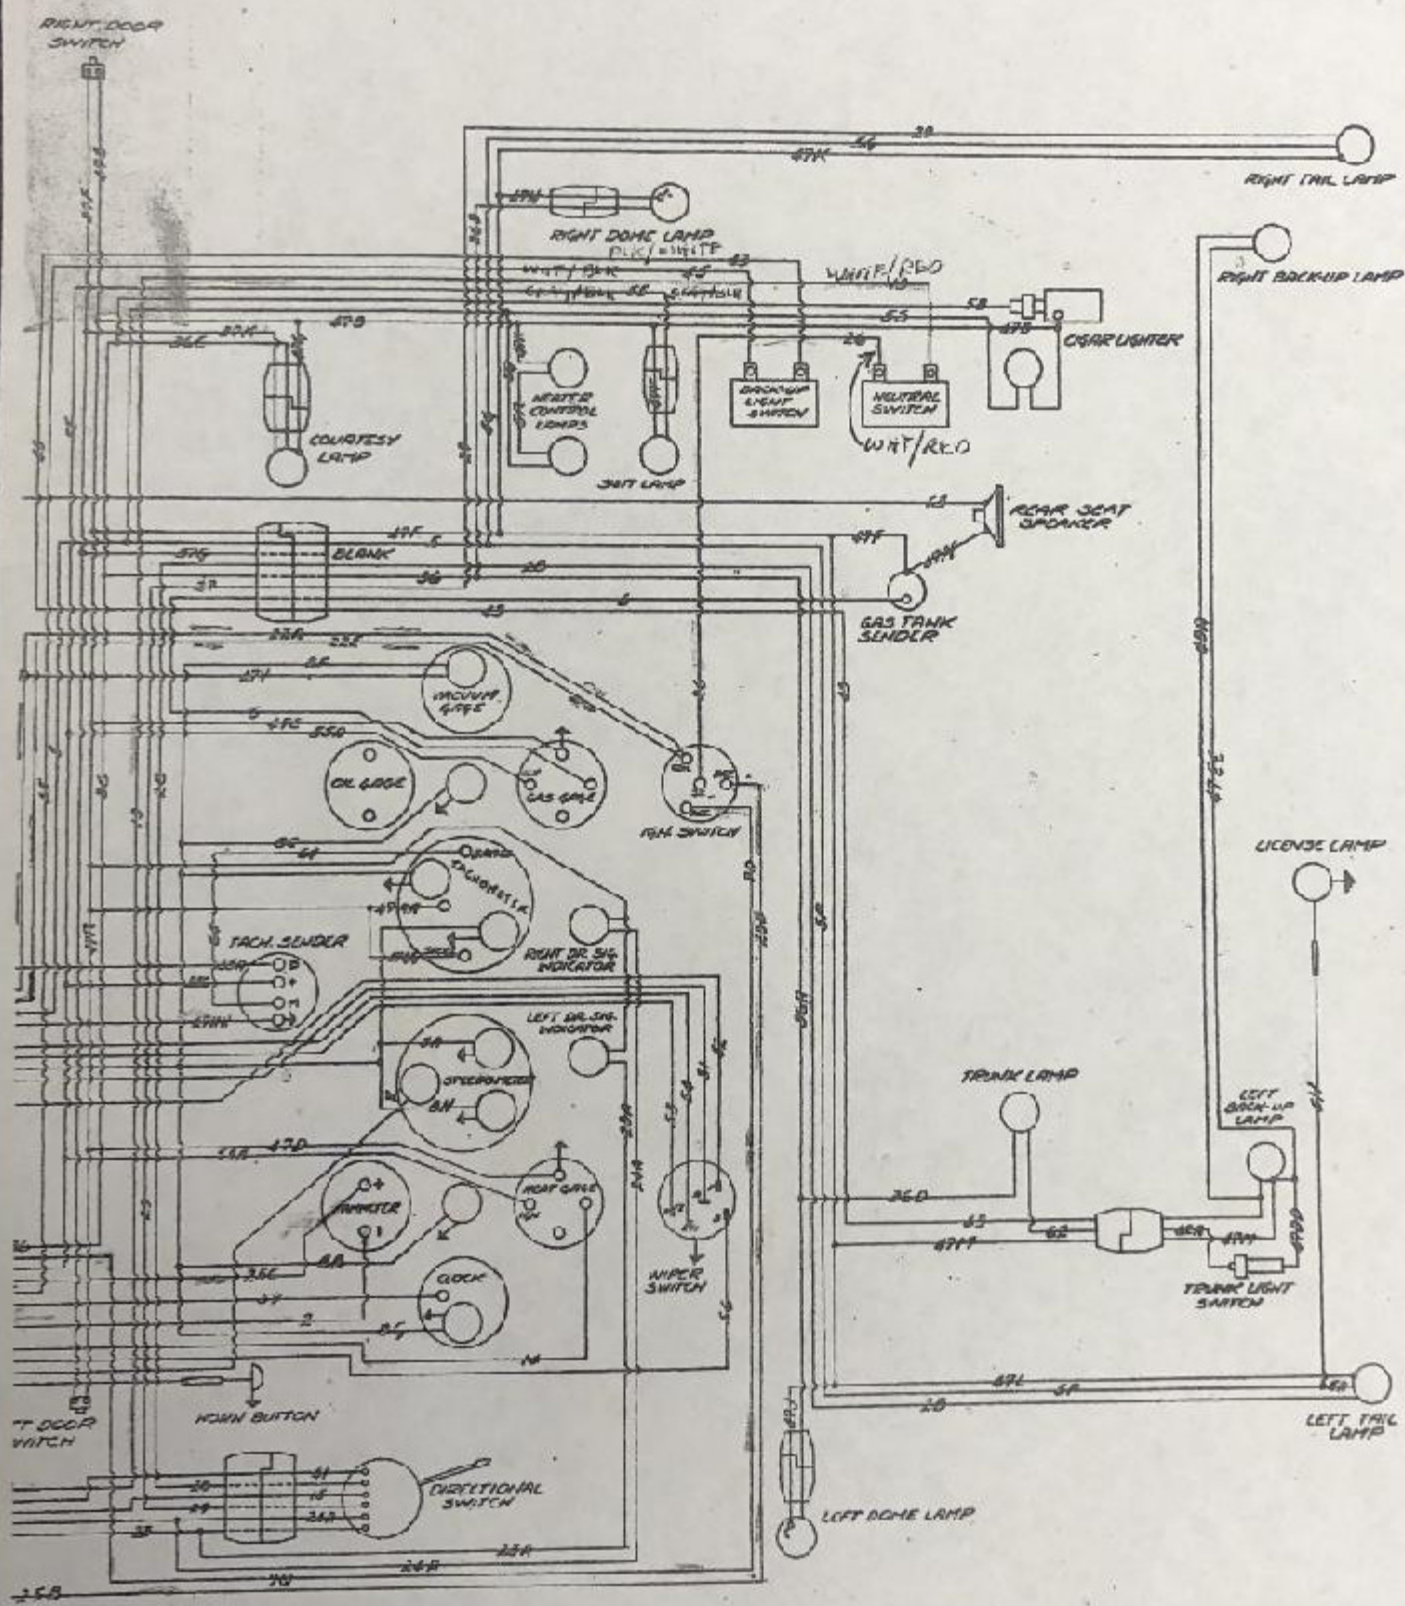

TOP / CIRCUIT NUMBERS  
 / CIRCUIT CHART #1548990